

Turning On the Camcorder

You can turn the camcorder on and off by opening and closing the LCD panel.

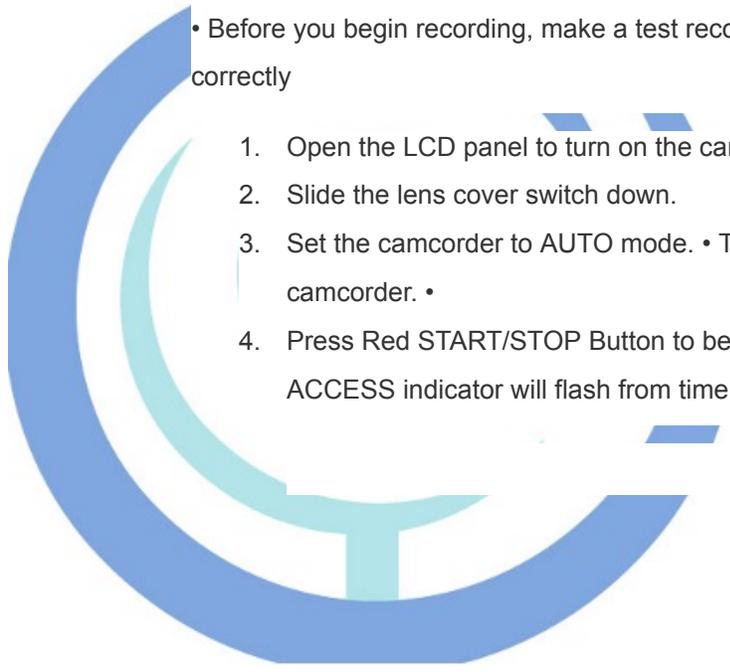
Before You Record

1. Make sure the POWER/CHG indicator is off.
 2. Plug the power cord into a power outlet.
 3. Connect the compact power adapter to the camcorder's DC IN terminal.
 4. Insert SD Card Labeled "C" **SD Cards are already formatted for you.**
 5. Open the LCD panel. If this is your first time to turn on the camcorder, the language selection screen of the initial setup screens will appear.
 6. Open the memory card slot cover.
 7. Insert the memory card at a slight angle, with the label facing toward the lens, all the way into the memory card slot until it clicks. The memory card slot is at a slight angle toward the lens so be careful not to damage the memory card when inserting it.
 8. Close the memory card slot cover. Do not force the cover closed if the memory card is not correctly inserted. To remove the memory card Push the memory card once to release it. When the memory card springs out, pull it all the way out.
-

Shooting Video

With AUTO mode, you can take great-looking videos by letting the camcorder automatically adjust settings based on the recording situation.

• Before you begin recording, make a test recording first to check that the camcorder is operating correctly

1. Open the LCD panel to turn on the camcorder.
 2. Slide the lens cover switch down.
 3. Set the camcorder to AUTO mode. • This step is not necessary the first time you use the camcorder. •
 4. Press Red START/STOP Button to begin recording. • Press again to pause the recording. The ACCESS indicator will flash from time to time while the scene is being recorded.
- 

When you have finished recording

1. Make sure that the ACCESS indicator is off.
 2. Close the LCD panel to turn off the camcorder. You can also press ON/OFF.
 3. Slide the lens cover switch up.
-

Charging the Battery Pack The camcorder can be powered with a battery pack or directly using the compact power adapter (we recommend using camera while plugged in to ensure the battery does not run out during capture)

1. Plug the power cord into a power outlet.
2. Connect the compact power adapter to the camcorder's DC IN terminal.
3. Attach the battery pack to the camcorder. Press the battery pack softly into the battery attachment unit and slide it up until it clicks in place. DC IN terminal F
4. Charging will start when the camcorder is turned off. • If the camcorder was on, the green POWER/CHG indicator will go out when you turn off the camcorder. After a moment, the POWER/CHG indicator will turn on in red (battery pack charging). The red POWER/ CHG indicator will go out when the battery pack is fully charged.

SCAN FOR VIDEO TUTORIALS AND ADDITIONAL SETUP INSTRUCTIONS

QUESTIONS? NEED MORE HELP?

CALL: (949) 346-1579

EMAIL: SALES@PODETIZE.COM

